


INSTRUCTIONS FOR FITTING A UC06 FILTER

WATER FOUNTAIN


1. Select location for water fountain on work top or sink and drill 1/2" hole
2. Place the small rubber washer (a), the chrome disc (b) and large rubber washer (c) on the tap stem.
3. Pass the blue tube and tap stem through the hole drilled in step 1.
4. Slide the steel washer (d) lock washer (e) and lock nut (f) up the blue tube to the tap stem. Tighten the lock nut (f) until the tap is held securely in place.

**NB: There may be a nut and olive remaining in the pack.
These are not required. Please discard**

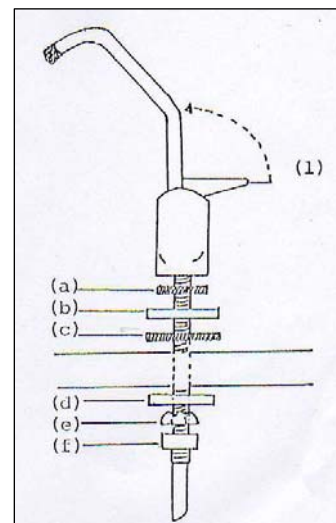


FILTER UNIT

1. Place the blue tube, attached to the tap, into the blue outlet fitting (g) on the filter unit and push firmly home.
2. Take the other blue tube and push one end firmly into the inlet fitting at the base of filter (j) and push firmly home.

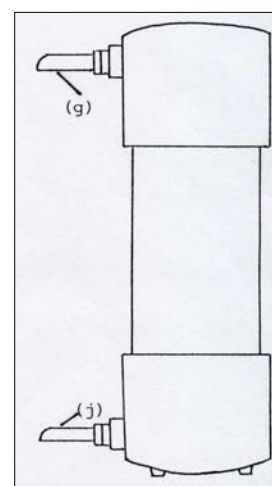

WATER CONNECTION

1. Place the saddle clamp on the cold mains supply pipe where tapping is to be made.
2. Tighten locking screw (i) to clamp pipe securely
3. Turn the piercing screw (k) clockwise and fully home to puncture pipe
4. Push the tap handle (l) upwards into the continuous flow position, then slowly turn the piercing screw (k) anticlockwise, allowing water to enter the filter slowly and displace trapped air and loose particles.
5. When the water runs clear, retract piercing screw (k) further until the water flows at a maximum of 6 pints per minute

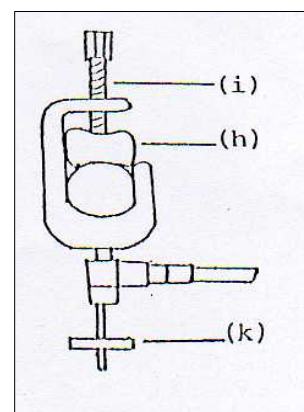

GENERAL NOTES

- NB:** Allow all units to flush for 15 minutes when first installed or following a prolonged period of non-use.
Always flush unit for 10-15 seconds before use.
To disconnect tubing from filter push collar of connector against connector body and pull tube.
In high sediment areas a pre-filter should be used to enhance the performance and life of your filter.

WARNING: MAXIMUM WORKING PRESSURE 100psi