

REPLACEMENT OF FILTER CARTRIDGE

- Turn off the water at inlet valve or pipe connection
- Lift tap handle if applicable
- Unscrew blue housing bowl
- Remove existing cartridge
- Clean the inside of blue housing bowl if necessary
- Put new cartridge into housing bowl
- Screw bowl back onto black head ensuring it does not cross-thread
- Turn on water
- Check for leaks.
- Black fines may come from filter initially. Allow water to flow until it becomes clear then turn off tap