

INSTRUCTIONS FOR REPLACEMENT OF UC06 WATER FILTERS

* ON UNPACKING PLEASE CHECK THAT THE COLLARS (WHICH SECURE THE PIPES) ARE IN PLACE INSIDE THE INLET AND OUTLET OF YOUR NEW FILTER BEFORE FITTING. ON RARE OCCASIONS THESE CAN BECOME DISLODGED IN THE BOX DURING TRANSIT, BUT CAN BE SIMPLY CLICKED BACK INTO PLACE

1. Turn off water by turning tommy bar (k) on saddle valve in a clockwise direction.
2. Put tap handle (l) in upright position to release pressure from filter and fittings and leave handle in this position.
3. To release upper blue pipe from outlet fitting (g) at top of filter, push collar of connector against connector body and pull pipe (it is advisable to have a bowl available to collect water remaining in upper pipe)
4. To release lower pipe from the inlet fitting (j) at bottom of filter push collar of connector against connector body and pull pipe
5. Place filter quickly in bowl as water will slowly seep from the unit
6. To fit new filter, connect lower pipe into fitting (j) and upper blue pipe into fitting (g). Push firmly home into the new fittings and dry damp surfaces with a cloth.
7. Turn on water slowly by opening tommy bar (k) on saddle valve in an anti-clockwise direction.
8. Leave water running from faucet for 5 minutes, then turn off flow by returning tap handle (l) to horizontal position.
9. Check all fittings for any leaks or seepage

WARNING: MAXIMUM WORKING PRESSURE 100psi

ENSURE ALL PIPES ARE AS STRAIGHT AS POSSIBLE WITH NO BENDS AT THE POINTS WHERE THEY ARE CONNECTED TO THE FILTER OR PIPE FITTINGS.

