

SILVERLINE WATER FILTERS

FITTING INSTRUCTIONS

WATER FOUNTAIN

- 1 Select location for water fountain on work top or sink and drill $\frac{1}{2}$ " hole.
 - 2 Place the small rubber washer (a), the chrome disc (b) and large rubber washer (c) on the tap stem.
 - 3 Place the blue tube and tap stem through the hole drilled in step 1.
 - 4 Slide the steel washer (d), lock washer (e) and lock nut (f) up the blue tube to the tap stem. Tighten the lock nut (f) until the tap is held securely in place.
- NB There may be a nut and olive remaining in the pack. These are not required. Please discard.

FILTER UNIT

- 5 Place the blue tube, attached to the tap, into the blue labelled outlet fitting (g) on the filter unit and push firmly home.
- 6 Place the red tube, attached to the outlet of the pressure protection valve (m) into the red inlet fitting (h) at the base of the filter unit and push firmly home.

WATER CONNECTION

- 7 Place the saddle clamp on the mains cold supply where the tapping is to be made.
- 8 Tighten locking screw (i) to clamp pipe securely.
- 9 Place the end of the red tube into the inlet of the pressure protection valve (n) and push firmly home.
- 10 Turn the piercing screw (k) clockwise and fully home to puncture the pipe.
- 11 Push the tap handle (l) upwards into the continuous flow position, then slowly turn the piercing screw (k) anticlockwise, allowing water to enter the filter slowly and displace trapped air and loose particles.
- 12 When water runs clear, retract the piercing screw (k) further until the water flows at a maximum of 6 pints per minute.

GENERAL NOTES

- NB Allow all units to flush for 15 minutes when first installed or following a prolonged period of non-use.
Always flush the unit for 10-15 seconds before use.
To disconnect tubing from the filter push collar of connector against connector body and pull tube.

In high sediment areas a pre-filter should be used to enhance the performance and life of your filter.

WARNING

MAXIMUM WORKING PRESSURE 100 psi.

